

Digital Camera Fit Chart - Digital Series

- Total Coverage Tops
- Dual Foam Technology™
- Universal Memory & Battery Pockets
- Constructed of Ballistic Nylon
- Metal Hardware

| |  |  |  |  |  |  |  |  |  |  |
|--------------|---|---|---|---|---|---|---|---|---|---|
| | Ultra-Thin Digital Camera Bag | Ultra-Compact Digital Camera Bag | Sub-Compact Digital Camera Bag | Compact Digital Camera Bag | Digital 1 | Digital 2 | Digital 3 | Digital 4 | Digital 6 | Digital Zoom 2 |
| | Model 5680 | Model 5686 | Model 5688 | Model 5690 | Model 5691 | Model 5692 | Model 5693 | Model 5694 | Model 5696 | Model 5682 |
| OTHER MODELS | 5204 | 5662, 5486, 5206 | 5490, 5214 | 5664, 5490, 5214 | 5664, 5492, 5217 | 5665, 5492, 5218 | | 5494, 5220 | 5400, 5200 | |

Digital Cameras

| CANON | | | | | | | | | | |
|---|---|---|---|---|---|---|---|--|---|---|
| Powershot SD10, SD20, SD100, SD110, SD200, SD300, SD400, SD500 | X | | | | | | | | | |
| S230, S400, S410, S500 | | X | | | | | | | | |
| A200, A300, A310, A400, A510, A520, S45, S50, S60, S70 | | | | | X | | | | | |
| A60, A70, A75, A80, A85, A95 | | | | | | X | | | | |
| G3, G5, G6, S1 IS Pro1 | | | | | | | X | | X | X |
| CASIO | | | | | | | | | | |
| EX-24U, EX-M2, EX-M20U, EX-S20, EX-S20U, EX-S3, EX-S100, EX-Z3, EX-Z4, EX-Z30, EX-Z40, EX-Z50, EX-Z55, EX-Z57, EX-Z750 | X | | | | | | | | | |
| QV-R3, QV-R4, QV-R40, QV-R51, QV-R61, QV-R62 | | | | X | | | | | | |
| EX-P600, EX-P700, GV-20 | | | | | | X | | | | |
| EX-P505, QV-5700 | | | | | | | X | | | |
| FUJI | | | | | | | | | | |
| Finepix F440, F450, Z1 | X | | | | | | | | | |
| F402 | | | X | | | | | | | |
| A345, A350, F10, F420, F455 | | | | X | | | | | | |
| A120, A310, A330, A340, E500, E510, E550, F700, F710, F810 | | | | | X | | | | | |
| 2650, A200, A203, A205Z, A210, A303, F401, F410Z, F601Z, F610, M603 | | | | | | X | | | | |
| 3800, S20, S3000, S3100, S5000, S5100, S602Z, S7000 | | | | | | | | | X | X |
| HEWLETT PACKARD | | | | | | | | | | |
| R507, R607 | | X | | | | | | | | |
| 435, M22, M23, M307, M407 | | | | | X | | | | | |
| 320, 620, 635, 735, 935, M417, R707, R717 | | | | | | X | | | | |
| 715, 720 | | | | | | | X | | | |
| 850, 945 | | | | | | | | | X | |
| KODAK | | | | | | | | | | |
| EasyShare C300, C340 | | | | X | | | | | | |
| CX4200, CX4230, CX4300, CX6200, CX6230, CX6330, CX7220, CX7300, CX7330, CX7430, CX7530, CX7560, DX4330, DX4530, DX6340, DX6440, DX7440, LS443, LS743, LS753, LS755, EasyShare One | | | | | X | | | | | |
| DX7630, Z730 | | | | | | X | | | | |
| Z700, Z740 | | | | | | | X | | | |
| DX6490, DX7590, Z7590 | | | | | | | | | X | |
| KONICA MINOLTA | | | | | | | | | | |
| X, X20, X31, X50, Xg, Xi, Xt | | | X | | | | | | | |
| G400, KD500, KD510 | | | | X | | | | | | |
| E323, F100, F200, F300, G500, G600 | | | | | X | | | | | |
| E223 | | | | | | X | | | | |
| S414 | | | | | | | X | | | |
| A1, A2, A200, Z1, Z2, Z3, Z5, Z10, Z20, 7Hi | | | | | | | | | X | X |

Digital Camera Fit Chart - Digital Series

- Total Coverage Tops
- Dual Foam Technology™
- Universal Memory & Battery Pockets
- Constructed of Ballistic Nylon
- Metal Hardware

| | Ultra-Thin Digital Camera Bag | Ultra-Compact Digital Camera Bag | Sub-Compact Digital Camera Bag | Compact Digital Camera Bag | Digital 1 | Digital 2 | Digital 3 | Digital 4 | Digital 6 | Digital Zoom 2 |
|--------------|-------------------------------|----------------------------------|--------------------------------|----------------------------|------------------|------------------|------------|------------|------------|----------------|
| | Model 5680 | Model 5686 | Model 5688 | Model 5690 | Model 5691 | Model 5692 | Model 5693 | Model 5694 | Model 5696 | Model 5682 |
| OTHER MODELS | 5204 | 5662, 5486, 5206 | 5490, 5214 | 5664, 5490, 5214 | 5664, 5492, 5217 | 5665, 5492, 5218 | | 5494, 5220 | 5400, 5200 | |

Digital Cameras

| | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|
| KYOCERA | | | | | | | | | | |
| Finecam SL300R, SL400R | | X | | | | | | | | |
| S3L, S3R, S5, S5R | | | | X | | | | | | |
| L30, L3V, L4V | | | | | X | | | | | |
| M400R | | | | | | | X | | | |
| M410R | | | | | | | | | X | |
| NIKON | | | | | | | | | | |
| S1 | X | | | | | | | | | |
| Coolpix 2100, 2200, 3100, 3200, 3700, 4100, 4200, 4600, 5200, 5600, 5900, 7600, 7900 | | | | X | | | | | | |
| 3500 | | | | | X | | | | | |
| 2000, 4300, 4800, SQ | | | | | | X | | | | |
| 5400, 8400 | | | | | | | X | | | |
| 4500 | | | | | | | | X | | |
| 5700, 8700, 8800 | | | | | | | | | X | X |
| OLYMPUS | | | | | | | | | | |
| Verve Digital, Verve S, IR300 | X | | | | | | | | | |
| D535, D630 | | | | X | | | | | | |
| C50, C60, C7000, D390, D395, D425, D540, D545, D560, D565, D575, D580, D595, Stylus 300, 400, 410, 500 | | | | | X | | | | | |
| C300, C5000, C5500 | | | | | | X | | | | |
| C4000, C5050, C5060, C740, C750UZ, C765, C770UZ, C7070 | | | | | | | X | | | |
| C720UZ, C725, C730UZ, C8080 | | | | | | | | | X | X |
| PANASONIC | | | | | | | | | | |
| FX2, FX7, LC50, LC70, LC80 | | | | X | | | | | | |
| F7, FX5 | | | | | X | | | | | |
| LC33, LC43, LS1, LZ1, LZ2 | | | | | | X | | | | |
| FZ1, FZ2, FZ3, FZ4, FZ5, FZ10K, FZ20, LC1 | | | | | | | | | X | |
| PENTAX | | | | | | | | | | |
| Optio S, S4, S4i, S5i, S5n | X | | | | | | | | | |
| 50, 330RS, 430RS, S30, S40, S50, SV | | | | X | | | | | | |
| 33L, 450, 550, 555, 750Z, WP, X | | | | | X | | | | | |
| 30, 33LF, 33WR, 43WR, 330GS | | | | | | X | | | | |
| SAMSUNG | | | | | | | | | | |
| A402, U-CA505 | | | | X | | | | | | |
| A5, A6, A7, A400, U-CA3, U-CA4, U-CA5, V3, V4, V5, V6, V40, V50, V70, V600, V700, Digimax 202, 250, 301, 370, 401, 430, 530 | | | | | | X | | | | |
| SONY | | | | | | | | | | |
| T1, T3, T7, U30, U40 | X | | | | | | | | | |
| T33, U10, U20, U50 | | X | | | | | | | | |
| L1, W1, W5, W7 | | | X | | | | | | | |
| M1, P10, P32, P41, P72, P73, P8, P92, P93, P100, P150, P200, S40, T11, U60 | | | | | X | | | | | |
| F88, P52, S60, S90, V1 | | | | | | X | | | | |
| V3 | | | | | | | X | | | |
| CD350, CD500, FD200, F828, H1 | | | | | | | | | X | X |
| TOSHIBA | | | | | | | | | | |
| PDR-3310, T10 | | | | X | | | | | | |
| 5300 | | | | | X | | | | | |
| 3300, 4300, M25 | | | | | | X | | | | |